
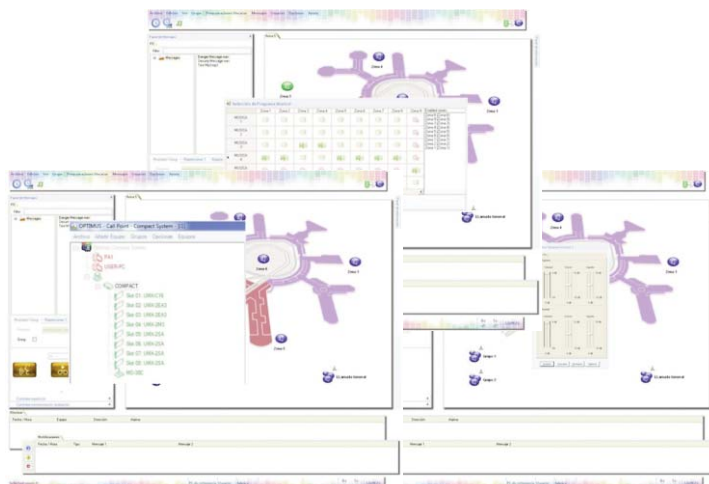


PROGRAMA DE CONFIGURACIÓN Y CONTROL

Compact SYSTEM

SCM-01 (CALL POINT)

Programa que permite configurar un sistema COMPACT, transferir los ajustes a cada equipo y controlar la instalación de megafonía, ya sea supervisando el correcto funcionamiento o enviando mensajes pregrabados a las zonas de altavoces preseleccionadas.

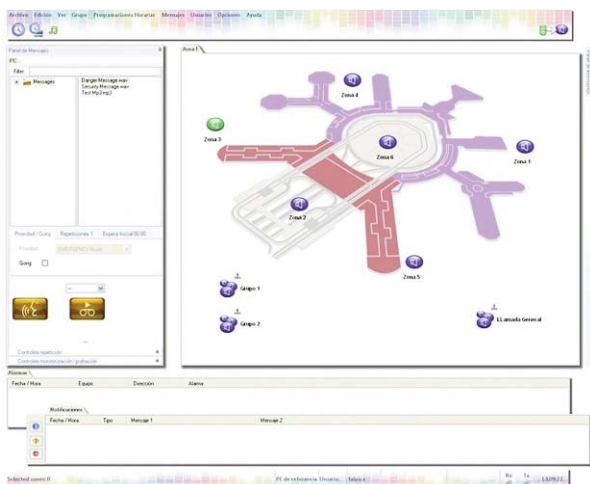

Opciones del programa

Menú Edición

- Diseño de Pantalla
- Área
- Añadir Área
- Eliminar Área
- Renombrar Área
- Redimensionar Área
- Zona
- Añadir Zona
- Eliminar Zona
- Grupo
- Añadir Grupo
- Eliminar Zona
- Equipo
- Añadir Equipo
- Eliminar Equipo
- Imagen
- Añadir Imagen de fondo
- Eliminar Imagen de fondo

Menú Archivo

Salir

Menú Ayuda

Acerca de...

Menú Opciones

- Idioma
- Configuración General
- General
- Optimus Status
- Log Niveles
- Logs Backup
- Configuración de audio
- PA Messages Play/Record
- Local Monitor / Record
- Configuración teclas acceso directo
- Configuración interfaz usuario
- Instalaciones

Menú Mensajes

- Nueva Secuencia de Mensajes
- Información de Secuencias de Mensajes
- Gestión Mensajes Pregrabados (PC)
- Gestión Mensajes Pregrabados (Equipos)

Menú Programaciones Horarias

- Nueva Programación | Mensajes
- Información Programaciones | Mensajes
- Nueva Programación | Volúmenes
- Información de Programaciones | Volúmenes

Menú Usuarios

- Cambio Usuario
- Nuevo Usuario
- Info Usuarios
- Nuevo Perfil
- Info Perfiles
- Configuración Usuarios

Menú Grupo

- Nuevo Grupo
- Información de Grupos

Menú Ver

- Log de Eventos
- Log de Mensajes
- Estado de los equipos
- Panel de Mensajes
- Panel de Estado
- Panel de Información
- Estado de las Zonas
- Barra de Zoom




SETUP AND CONTROL SOFTWARE

Compact SYSTEM

SCM-01 (CALL POINT)

Software to configure the COMPACT system, to transfer the settings to each equipment and to control the installation of public address system, either supervising the correct operation or sending pre-recorded messages to the pre-selected speaker zones.

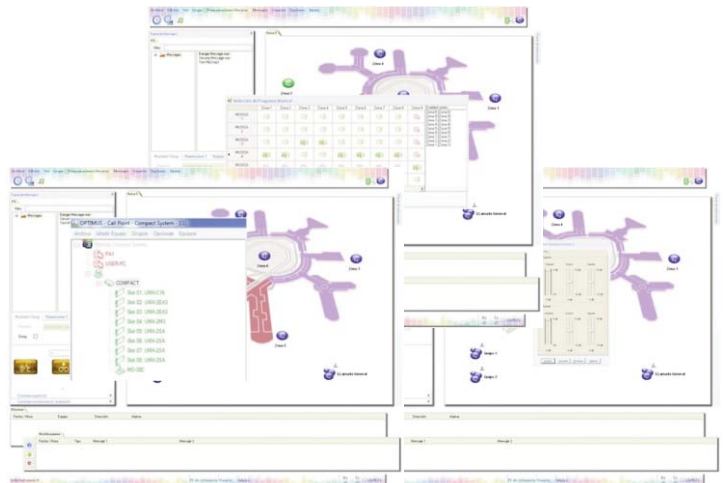

Program options

Edition Menu

- Screen Design
- Area
 - Add Area
 - Delete Area
 - Rename Area
 - Resize Area
- Zone
 - Add Zone
 - Delete Zone
- Group
 - Add Group
 - Delete Group
- Device
 - Add Device
 - Delete Device
- Image
 - Add Background Image
 - Delete Background Image

File Menu

- Exit

Help Menu

- About...

Options Menu

- Language
- General Configuration
 - General
 - Optimus Status
 - Log Levels
 - Logs Backup
- Audio Settings
 - PA Messages Play/Record
 - Local Monitor / Record
- Key board short cuts
- User interface Configuration
- Setups

Messages Menu

- New Message Sequence
- Message Sequence Information
- Managing prerecorded Messages (PC)
- Managing prerecorded Messages (Device)

Schedule Menu

- New Message Schedule
- Message Time Schedule Information
- New Volume Schedule
- Volume Schedule Information

Users Menu

- Change User
- New User
- User Info
- New Profile
- Profiles Info
- User Configuration

Group Menu

- New Group
- Group Information

View Menu

- Event Log
- Message Log
- Device Status
- Message Board
- State Board
- Information Board
- Zone Status
- Zoom Bar

